


Data sheet

# Contactors Types CI 61 - 98

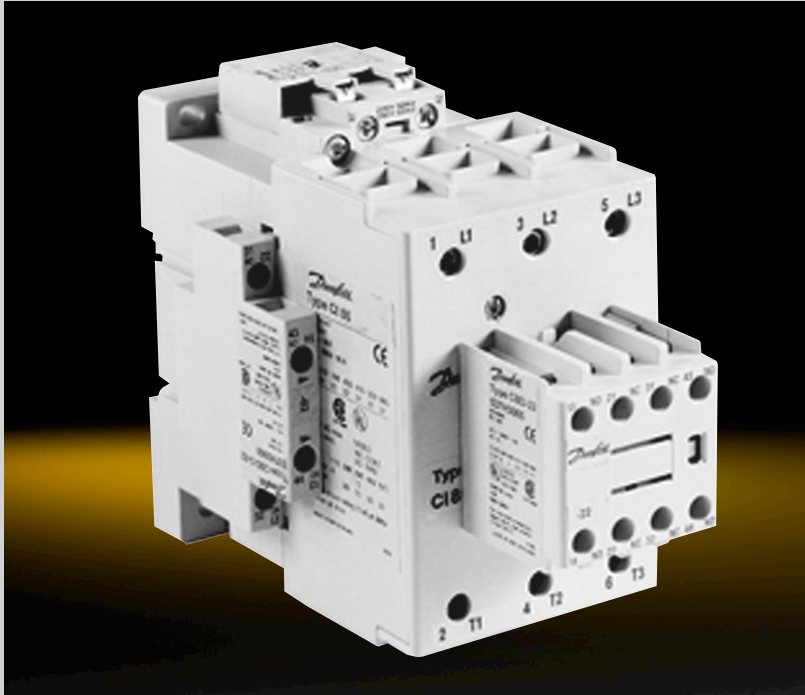

Contactors CI 61, CI 73, CI 86 and CI 98 switch powers of up to 30 kW, 37 kW, 45 kW and 55 kW respectively under  $3 \times 380$  V AC-3 loads.

Accessories include a wide selection of auxiliary contacts, mechanical interlocks and RC elements. Auxiliary contacts for mounting on the side or top are available. The auxiliary contacts have force-actuated contacts and can form part of safety switching.

## Contactor, types CI 61 - 98

### Ordering

#### Contactors CI 61, CI 73, CI 86, CI 98

Main circuit					Main contacts (make) Number	Add-on options Number	Code no. <sup>1)</sup>	Type
AC-3 load			I <sub>th</sub> <sup>2)</sup> (AC-1) Open A	I <sub>the</sub> <sup>3)</sup> (AC-1) Encl. A				
U <sub>e</sub> 220-240 V kW	U <sub>e</sub> 380-690 V kW	I <sub>e</sub> A						
18.5	30	60	100	100	3	1-8	<b>037H3061</b>	CI 61
22	37	72	100	100	3	1-8	<b>037H3062</b>	CI 73
25	45	85	100	100	3	1-8	<b>037H3063</b>	CI 86
30	55	97	130	110	3	1-8	<b>037H3040</b>	CI 98

<sup>1)</sup> Coil voltage/frequency or Suffix no. (see table below) must be added to the Danfoss code no.

<sup>2)</sup> The thermal current I<sub>th</sub> gives the maximum load at 40°C, which corresponds to installing the contactor in air (open).

<sup>3)</sup> The thermal current I<sub>the</sub> gives the maximum load at 60°C, which corresponds to installing the contactor in an enclosure.

#### Coil voltages and coils for CI 61, CI 73, CI 86, C98

Coil voltage <sup>1)</sup> (suffix no.)		24 V 50/60 Hz (13)	110 V, 50 Hz/60 Hz (23)	220-230 V, 50 Hz/60 Hz (32)	380-400 V, 50 Hz/60 Hz (39)
Contactor	Code no.				
CI 61	<b>037H3061</b>	■	■	■	■
CI 73	<b>037H3062</b>	■	■	■	□
CI 86	<b>037H3063</b>	■	■	■	■
CI 98	<b>037H3040</b>	-	-	■	■

Available ■  
Special order □  
Unavailable -



CBD 11



CBD 22



BD S-



Mechanical interlock

#### Auxiliary contact block CBD for CI 61, CI 73, CI 86 and CI 98 contactors

Contact function <sup>1)</sup>	Load				Code no.	Type
	I <sub>e</sub> (AC-15) A	I <sub>th</sub> <sup>2)</sup> (AC-1) Open A	I <sub>the</sub> <sup>3)</sup> (AC-1) Encl. A	U <sub>e</sub> V		
1 make (NO) + 1 break (NC)	5.5	10	6	690	<b>037H3064</b>	CBD-11
2 make (NO) + 2 break (NC)	5.5	10	6	690	<b>037H3065</b>	CBD-22
1 break (NC)	3	10	6	690	<b>037H3066</b>	CBD S-NC
1 make (NO)	3	10	6	690	<b>037H3067</b>	CBD S-NO
1 make (NO) + 1 break (NC)	3	10	6	690	<b>037H3069</b>	CBD S-11
2 make (NO)	3	10	6	690	<b>037H3070</b>	CBD S-20

<sup>1)</sup> Force-actuated contacts suitable for safety switching.

<sup>2)</sup> The thermal current I<sub>th</sub> gives the maximum load at 40°C, which corresponds to installing the contactor in air (open).

<sup>3)</sup> The thermal current I<sub>the</sub> gives the maximum load at 60°C, which corresponds to installing the contactor in an enclosure.


In CBD auxiliary contact the silver tips are cross-stamped.

In CBD S auxiliary contact the silver tips are H-shaped.

Both contact types are PLC-compatible. Min. load 24 V, 10 mA.



RCD-



Clip-on marker

#### Accessories for contactors CI 61, 73, 86, 98

Description	Comments	Code no.
Mech. interlock	Mech. interlock can be established between pairs	<b>037H3074</b>
	Type RCD 280 (110-280 V, 50/60 Hz)	<b>037H3072</b>
Clip-on markers	Rating plate with cover	<b>037H3142</b>

## Contactors, types CI 61 - 98

### Description



Thermal overload relays TI 80-86 are used with contactors type CI 61, CI 73 and CI 86 to give overload protection of squirrel-cage motors of 30 kW to 55 kW.

The relays trip under asymmetric load, i.e. accelerated release if phase drop-out occurs.

Other features of TI 80 and TI 86:

- stop/reset button
- manual/automatic reset
- test button
- double scale for direct start or Y/D start
- signal contact with changeover

### Ordering

#### Thermal overload relays TI 80 and TI 86

Range		Max. fuse <sup>1)</sup>		Code no.	Type
Motor starter A	Y/D starter A	gL, gL, gG type 2 A	BS 88, type T type 2 A		
42-63	75-109	100	100	<b>047H1016</b>	TI 80
60-80	105-138	125	125	<b>047H1017</b>	TI 80
74-85	130-147	125	125	<b>047H1018</b>	TI 86

<sup>1)</sup> To IEC 947-4 coordination types 1 and 2:

Coordination type 1: Any type of damage to the motor starter is permissible. If the motor starter is in an enclosure, no external damage to the enclosure is permissible. After a short-circuit the thermal overload relay shall be partially or wholly replaced.

Coordination type 2: No damage to the motor starter is permissible, but slight contact burning and welding is permissible.

#### Selection of thermal overload relay

The selection of a thermal overload relay must be based on the motor full load current and the method of starting:


- With direct start the motor starter range applies.
- With star-delta start Y/D starter range applies.

#### Example:

Full load current: 85 A

-With direct start, the suitable motor starter range is 74-85 A, i.e. thermal overload relay 047H1018.

-With star-delta start, the suitable Y/D starter range is 75-109 A, i.e. thermal overload relay 047H1016.



Base



Push button extension



Current rail set

#### Accessories for thermal overload relays TI 80-86

Description	Comments	Code no.
Clip-on markers	For mounting on TI 80-86 (250-off)	<b>037H010566</b>
Base	For separate mounting of TI 80-86	<b>047L045666</b>
Pushbutton extension	For TI 9C-86 (3 mm)	<b>047L040666</b>
Current rail set	For direct mounting of TI 80/TI 86 TI for CI 98? on contactors CI 61-73-86 (set of 3 )	<b>037H010866</b>

## Contactor, types CI 61 - 98

### Construction standards

Contactors, thermal overload relays and accessories are designed and tested in accordance with IEC 947/EN 60947.

Environment

Temperate climate

Tested and passed in accordance with DIN 50 016 and 40 046 part 38 and IEC 68

Max. installation height: 2000 NN, in accordance with IEC 947

### Pulse voltage

Type	U <sub>imp</sub>
CI 61-73-86-98	8 kV


### Ambient temperature

Type	Ambient temperature	
	Operation	Storage/Transport
CI 61-73-86-98	-25 °C ... +60 °C	-55 °C ... +80 °C

### Environment

Type	Temperature compensated	Ambient temperature	Vibration	Shock perpendicular to contact system	Max. operations per hour
TI 86	-5 to +40 °C	-50 to +60 °C	2 g at 200 Hz	9 g for 7.5 ms	30

### Mounting direction

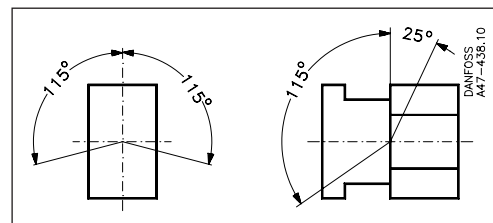

### Approvals

	EN 609	UL-recognized UL-listed CSA, Canada
CI 61	●	●
CI 73	●	●
CI 86	●	●
CI 98	●	●
TI 80	●	●
TI 86	●	●

● Approved


### Rated life

Type	Mechanical life Operations	Electrical life AC-3 Operations	Duty cycles per hour AC-3 load Operations
CI 61-73-86-98	10 x 10 <sup>6</sup>	1 x 10 <sup>6</sup>	300


## Contactor, types CI 61 - 98

### Electrical life curves


Contactors CI 61-73-86-98 load categories, AC-1

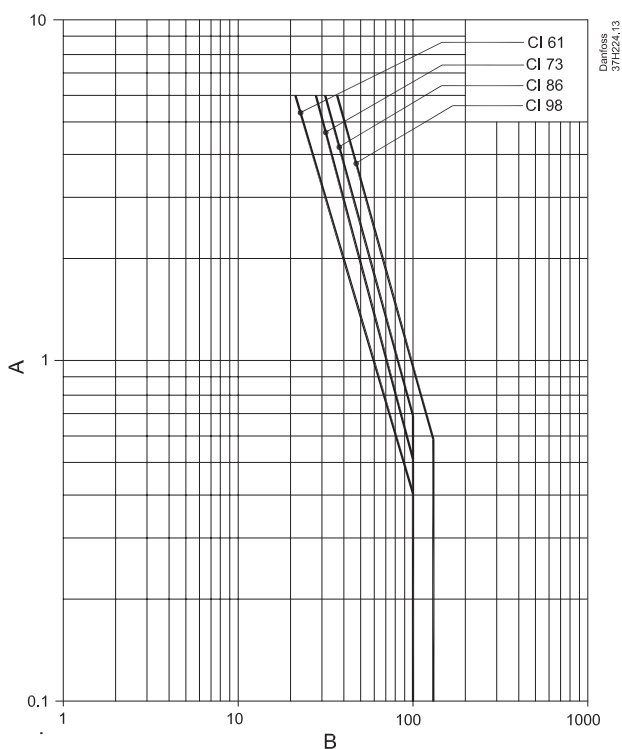


Contactors CI 61-73-86-98, load categories AC-3 & AC4  
10% AC-4 Mixed operation of squirrel-cage motors;  
 $U_e = 230 \dots 400 \dots 460 \text{ V}$

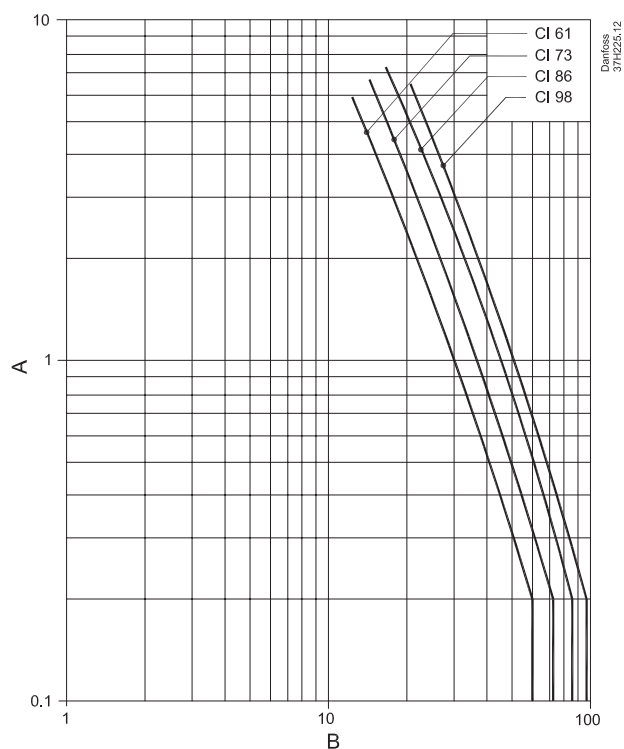

Contactors CI 61-73-86-98, load categories AC-4  
Switching of squirrel-cage motors;  $U_e = 230 \dots 690 \text{ V}$

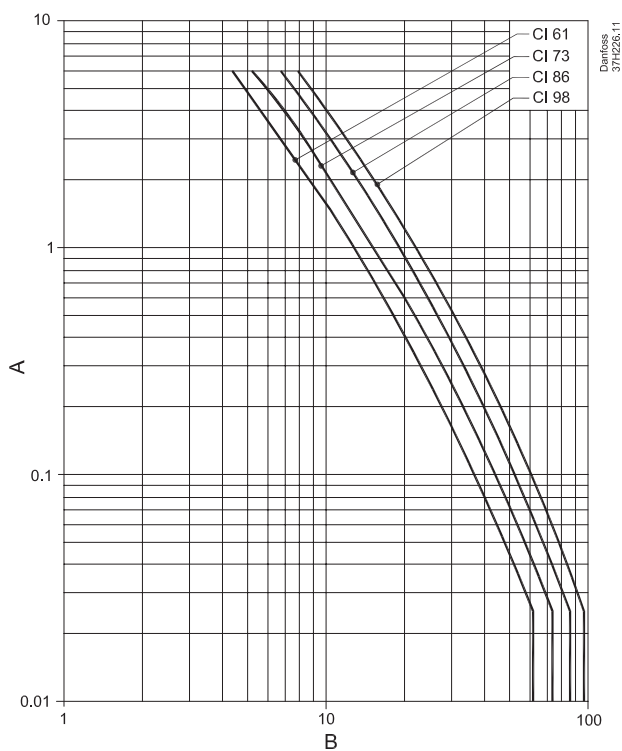


Contactors CI 61-73-86-98, load categories AC-3  
Switching of squirrel-cage motors while starting;  
 $U_e = 230 \dots 400 \dots 460 \text{ V}$

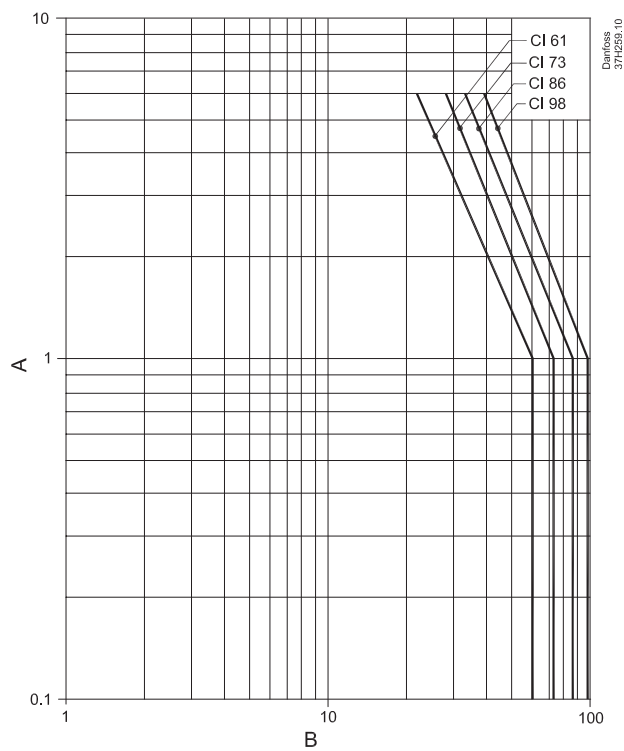

A: Electrical life in millions of make/break operations  
B: Rated Operating current (A)

Tripping graphs

TI 80 / 86

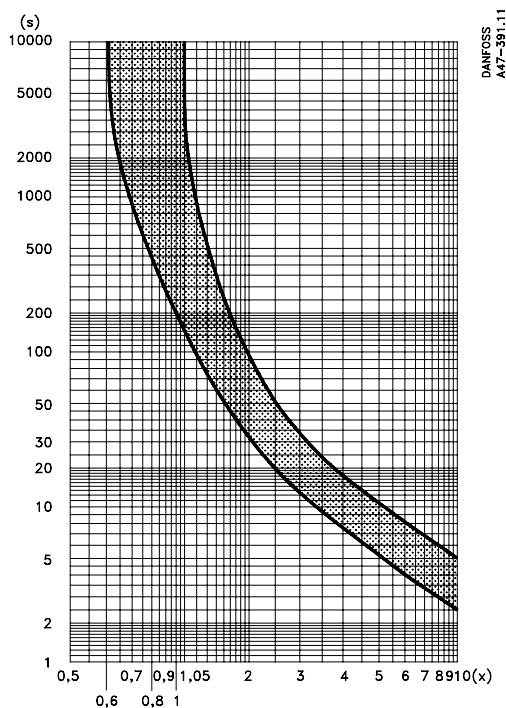

*Explanation of graphs*

Mean value curves

Upper curve: 3-phase tripping and asymmetric load tripping at min. setting.

Lower curve: Asymmetric load tripping at max. setting.

When tripping from the operationally warm condition, the tripping times are approx. 30% of the values shown. These values apply at an ambient temperature = 20°C.

3-phase tripping:  $x = \frac{\text{measured current}}{\text{rated motor current}}$

Asymmetric load tripping:  $x = \frac{\text{measured current}}{\text{max. scale value on overload relay}}$

Tripping time  $2 < T_p \leq 10$  s at  $7.2 \times I_e$  class 10 A

Note! In general, the thermal overload relay is always set on motor full load current.

*3-phase overload*

- 1) Measure overload current
- 2) Find the overload factor (x) by dividing the measured value by the set value of the thermal overload relay (motor full load current).
- 3) Find (x) on the horizontal axis and follow a line vertically up until it intersects the upper curve.
- 4) From the intersection point, follow a horizontal line to the left and read off on the vertical axis the time that will elapse before the thermal overload relay cuts out the motor.

*Asymmetric load tripping*

- 1) Measure the current the motor draws from one of the intact phases.
- 2) Find the overload factor (x) by dividing the measured value by the maximum scale value of the thermal overload relay.
- 3) Find (x) on the horizontal axis and follow a line vertically up until it intersects the lower curve.
- 4) From the intersection point, follow a horizontal line to the left and read off on the vertical axis the time that will elapse before the thermal overload relay switch off the motor.

# Contactors, types CI 61 - 98

## Contact symbols and terminal marking

### Auxiliary contacts

<p>Auxiliary contacts CBD - 11</p>	<p>Auxiliary contacts CBD - 22</p>
<p>Auxiliary contacts CBD S - NO</p>	
<p>Auxiliary contacts CBD S - NC</p>	
<p>Auxiliary contacts CBD S - 11</p>	
<p>Auxiliary contacts CBD S - 20</p>	

### Contactors and thermal overload relay

<p>Contactors CI 61/73/86/98</p>	<p>Thermal overload relay TI 80/86</p>
--------------------------------------	--

**Connections, main contacts and contactor coils**

Type	Connection method	EN 60947			Tightening torque [Nm]
		Single [mm <sup>2</sup> ]	Multicore		
			Without terminal sleeve [mm <sup>2</sup> ]	With terminal sleeve [mm <sup>2</sup> ]	
CI 61, CI 73, CI 86, CI 98	Screw and box terminal	2.5-50	2.5-35	-	2-6
TI 80, TI 86	Screw and box terminal	1.5-35	1.5-25	-	0.8-3-5
Coil	Screw and clamp washer	0.52-2.5	0.5-2.5	0.5-2.5	1-1.5

**Loads**
**Direct start, load categories AC-2, AC-3, AC-4**

Switching of 3-phase Motors; (50 Hz); Ambient temperature 60 °C, AC-2, AC-3, AC-4							
Type		Rated loads at 50Hz					
		220-230 V	240 V	380-400 V	415 V	500 V	690 V
CI 61	A	62	62	60	60	55	34
	kW	18.5	18.5	32	32	37	32
CI 73	A	72	72	72	72	67	42
	kW	22	22	40	40	45	40
CI 86	A	85	85	85	85	80	49
	kW	25	25	45	45	55	45
CI 98	A	96	95	97	97	78	57
	kW	30	30	55	55	55	55

**Star-delta start, load category AC-3**

Star-delta start, load category AC-3							
Type		Rated Loads at 50Hz					
		220-230 V	240 V	380-400 V	415 V	500 V	690 V
CI 61	A	107	107	104	104	95	59
	kW	32	32	55	55	63	55
CI 73	A	125	125	125	125	116	73
	kW	37	40	63	63	80	63
CI 86	A	147	147	147	147	139	85
	kW	45	50	80	80	90	80
CI 98	A	166	165	168	168	135	99
	kW	50	50	90	90	90	90

**Three-phase ohmic load, load category AC-1**

AC-1 Active Power Load (50 Hz)							
Type		Operating temperatur max. 40°C (open condition) Heat-resistant cable only (min 75°C)					
		220-230 V	240 V	380-400 V	415 V	500 V	690 V
CI 61, CI 73, CI 86	A	100	100	100	100	100	100
	kW	40	42	69	2	87	120
CI 98	A	130	130	130	130	130	130
	kW	52	54	90	93	113	155

**Three-phase ohmic load, load category AC-1**

AC-1 Active Power Load (50 Hz)							
Type		Operating temperatur max. 60°C (encl. condition) Heat-resistant cable only (min 75°C)					
		220-230 V	240 V	380-400 V	415 V	500 V	690 V
CI 61, CI 73, CI 86	A	100	100	100	100	100	100
	kW	40	42	69	72	87	120
CI 98	A	110	110	110	110	110	110
	kW	44	46	76	79	95	131

**Switching three-phase power transformers (AC-6a)**

Switching of Power Transformers; AC-6a (50 Hz)							
Type		Transformer load, (factor n = 30, inrush current = n x rated transformer current)					
		220-230 V	240 V	380-400 V	415 V	500 V	690 V
CI 61	A	40.8	40.8	40.8	40.8	40.8	40.8
	kW	16	17	28	29	35	49
CI 73	A	40.8	40.8	40.8	40.8	40.8	40.8
	kW	16	17	28	29	35	49
CI 86	A	40.8	40.8	40.8	40.8	40.8	40.8
	kW	16	17	28	29	35	49
CI 98	A	48.5	48.5	48.5	48.5	48.5	48.5
	kW	19.3	20.2	33.6	34.9	42	58



## Contactor, types CI 61 - 98

Table (continued)

### Switching lighting

Type	Incandescent lamps (AC-5b) Max. operating current [A]	Fluorescent lamps, individually compensated (AC-5b)				
		Max. operating current [A] at operating temperature <sup>1)</sup>		Max. Capacity [uF] at Icc=		
		40°C	60°C	10kA	20kA	50kA
CI 61	60	81	77	4000	2000	800
CI 73	70	85	81	4000	2000	800
CI 86	76	90	90	4700	2350	940
CI 98	90	115	100	4700	2350	940

### Switching capacitor loads, individual capacitors (AC-6b)

Inductance in leads between capacitors connected in parallel min. 6μH

Type	Max. Reactive power (kVAR) <sup>1)</sup>							
	220-240 V		380-415 V		500 V		690 V	
	40°C	60°C	40°C	60°C	40°C	60°C	40°C	60°C
CI 61	28	28	48	42	50	42	50	42
CI 73	28	28	48	48	55	50	55	50
CI 86	28	28	48	48	60	55	60	55
CI 98	28	28	48	48	60	55	60	55

### Switching capacitor loads, regulating capacitors (AC-6b)

Inductance in leads between parallel-connected capacitors must be min. 6μH

Type	Max. Reactive power (kVAR) <sup>1)</sup>							
	220-240 V		380-415 V		500 V		690 V	
	40°C	60°C	40°C	60°C	40°C	60°C	40°C	60°C
CI 61	28	28	40	40	50	40	40	40
CI 73	28	28	48	48	50	50	50	50
CI 86	28	28	48	48	50	50	50	50
CI 98	28	28	48	48	50	50	50	50

### Switching direct current load at 60°C ambient temperature

Load categories DC-3 and DC-5, contacts connected in series

Type	Max. operating current (A)									
	DC-3, 3 poles in series					DC-5, 3 poles in series				
	24 V	48 V	110 V	220 V	440 V	24 V	48 V	110 V	220 V	440 V
CI 61	90	70	70	25	0.6	90	70	70	25	0.6
CI 73	90	70	70	25	0.6	90	70	70	25	0.6
CI 86	100	80	80	30	0.6	100	80	80	30	0.6
CI 98	100	80	80	30	0.6	100	80	80	30	0.6

### Switching direct current load at 60°C ambient temperature

Load category C-1, contacts connected in series

Type	Max. operating current (A)														
	24 V			48 V			110			220 V			440 V		
	1 pole	2 poles	3 poles	1 pole	2 poles	3 poles	1 pole	2 poles	3 poles	1 pole	2 poles	3 poles	1 pole	2 poles	3 poles
CI 61	70	70	90	40	70	90	11	70	90	2	15	70	0.5	1.5	5
CI 73	80	80	90	40	80	90	11	80	90	2	15	80	0.5	1.5	5
CI 86	80	80	100	40	80	100	11	80	100	2	15	80	0.5	1.5	5
CI 98	80	80	100	40	80	100	11	80	100	2	15	80	0.5	1.5	5

### Contact resistance and power loss

Type	Typical impedance per pole [mΩ]	Power loss at 3 poles	Coil consumption a.c. [W]	Total power loss
		AC-3 [W]		AC-1 [W]
CI 61	0.9	9.7	4.5	14.2
CI 73	0.9	14	4.5	18.5
CI 86	0.9	19.5	4.5	24
CI 98	0.6	17	9	26

### Short-time withstand current $I_{cw}$

Type	Current transfer time 10 sec.	Min cooling Time (min.)
	Short time withstand current in Amps (I <sub>cw</sub> )	
CI 61	700	20
CI 73	700	20
CI 86	700	20
CI 98	840	20

<sup>1)</sup> 40°C is defined as non-enclosed installation  
60°C is defined as enclosed installation

## Contactor, types CI 61 - 98

Table (continued)

### Connections, auxiliary contacts

Type	Connection method	Single and multi core [mm <sup>2</sup> ]	High capacity		Tightening torque [Nm]
			without term. sleeve [mm <sup>2</sup> ]	with term. sleeve [mm <sup>2</sup> ]	
CBD-, CBD S- For CI 61-73-86-98	Screw and clamp washer	0.75 - 2.5	1 - 2.5	1 - 2.5	1 - 1.5
TI 80, TI 86	Screw and clamp washer	0.75 - 2.5	0.75 - 1.5	0.5 - 1.5	0.3 - 1

### Auxiliary contacts, load categories AC-15 and AC-1

Type	Comments	Max. operating current [A]							
		AC-15				AC-1			
		220-230 V	240 V	380-400 V	415 V	500 V	690 V	40 °C <sup>1)</sup>	60 °C <sup>1)</sup>
CBD-	For contactors CI 61-73-86-98	5.5	5	3	2.5	1.6	1	10	6
CBD S-	For contactors CI 61-73-86-98	3	3	2	2	1.6	0.75	10	6

<sup>1)</sup> 40°C is defined as non-enclosed installation  
60°C is defined as enclosed installation

### Auxiliary contacts, load categories DC-12, DC-13, and DC-14

Type	Comments	Max. operating current [A]														
		DC-12				DC-13				DC-14						
		24 V	48 V	110 V	220 V	440 V	24 V	48 V	110 V	220 V	440 V	24 V	48 V	110 V	220 V	440 V
CBD-	For contactors CI 61-73-86-98	12	9	3.5	0.55	0.2	5	2	0.7	0.25	0.12	9	5	2	0.4	0.16
CBD S-	For contactors CI 61-73-86-98	6	3	0.45	0.18	0.1	3	1.5	0.6	0.3	0.2	2	1.6	0.3	0.12	0.15

### Coils, consumption and operating times

Type	Inrush power		Holding-power		Pull-in voltage	Drop-out voltage	Make time	Break time
	a.c.		a.c.		a.c.	a.c.	a.c.	a.c.
CI 61-73-86-98	VA	W	VA	W	V	V	ms	ms
		200	16	16	4.5	(0.85-1.1) x U <sub>S</sub>	(0.3-0) x U <sub>S</sub>	18.5-30

### RC Element (charge suppressor)

Type	Comments	Overvoltage factor $n = \frac{U_{max}}{U_n}$
RCD	Suitable for contactors CI 61,73,86	1-3

### Max. load control circuit (contact system)

Type	Load		Max. fuse	
	AC-15	DC-13	gI, gL, gG	BS 88 type T
TI 80	500 V, 2A, 200 VA	250 V, 2 A, 20 W	4 A	6 A
TI 86				

## UL / CSA Specifications

### UL/CSA approved loads

Type	Motor load (AC-3) [hp]						Other loads (AC-1) [A]			
	1-phase		3-phase				UL		CSA	
	115 V	230 V	200 V	240 V	460 V	575 V	40°C <sup>1)</sup>	60°C <sup>1)</sup>	40°C <sup>1)</sup>	60°C <sup>1)</sup>
CI 61	5	10	15	20	40	50	90	90	90	90
CI 73	5	15	20	25	50	60	90	90	90	90
CI 86	7.5	15	25	30	60	60	100	100	100	100
CI 98	10	20	30	30	75	75	120	120	120	120

<sup>1)</sup> 40°C is defined as non-enclosed installation  
60°C is defined as enclosed installation

### Auxiliary contacts, UL/CSA approved loads

Type	Comments	Load capacity			
		a.c.		d.c.	
		Category	VA	Category	W
CBD- and CBD S-	For contactors CI 61-73-86-98	A600	720	Q600	69


### Connections, main contacts

Type	Connection method	Single and multi core (AWG)	Tightening torque (lb-in)
CI 61, CI 73, CI 86, CI 98	Screw and clamp washer	14-2	18-52
TI 80, TI 86	Screw and clamp washer	16-3	7-30


## Contactor, types CI 61 - 98

### Dimensions


Contactor CI 61, 73, 86, 98

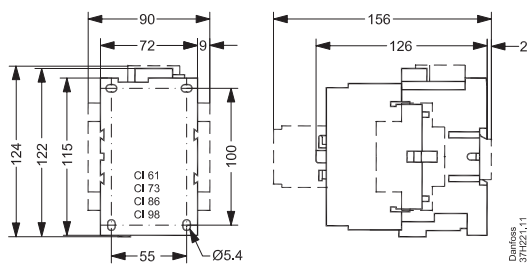

Contactor CI 61, 73, 86, 98 built together with thermal overload relay TI 80-86

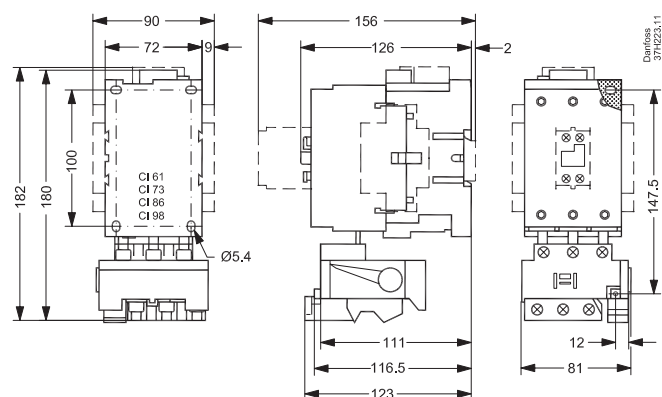


Drilling dimensions  
CI 61, 73, 86, 98 with mechanical interlock

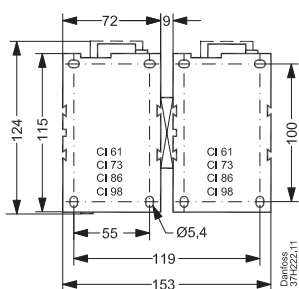


Thermal overload relays TI 80 and TI 86 for contactors CI 61, 73, 86

Thermal overload relays TI 80 and TI 86

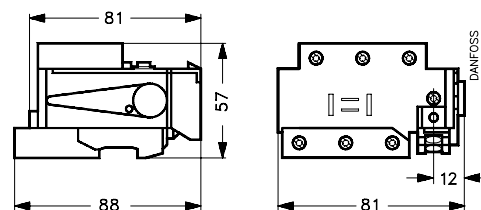

Thermal overload relay TI 80/ TI 86 on base plate

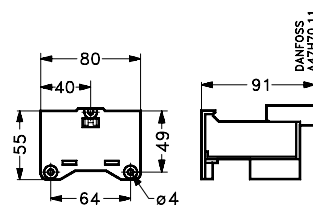

Danfoss can accept no responsibility for possible errors in this catalogue. Danfoss reserves the right to alter its products without notice. This also applies to products shown in this catalogue that have already been put into service. It is necessary to specify the correct Danfoss reference number. All trademarks are the property of their respective companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.